
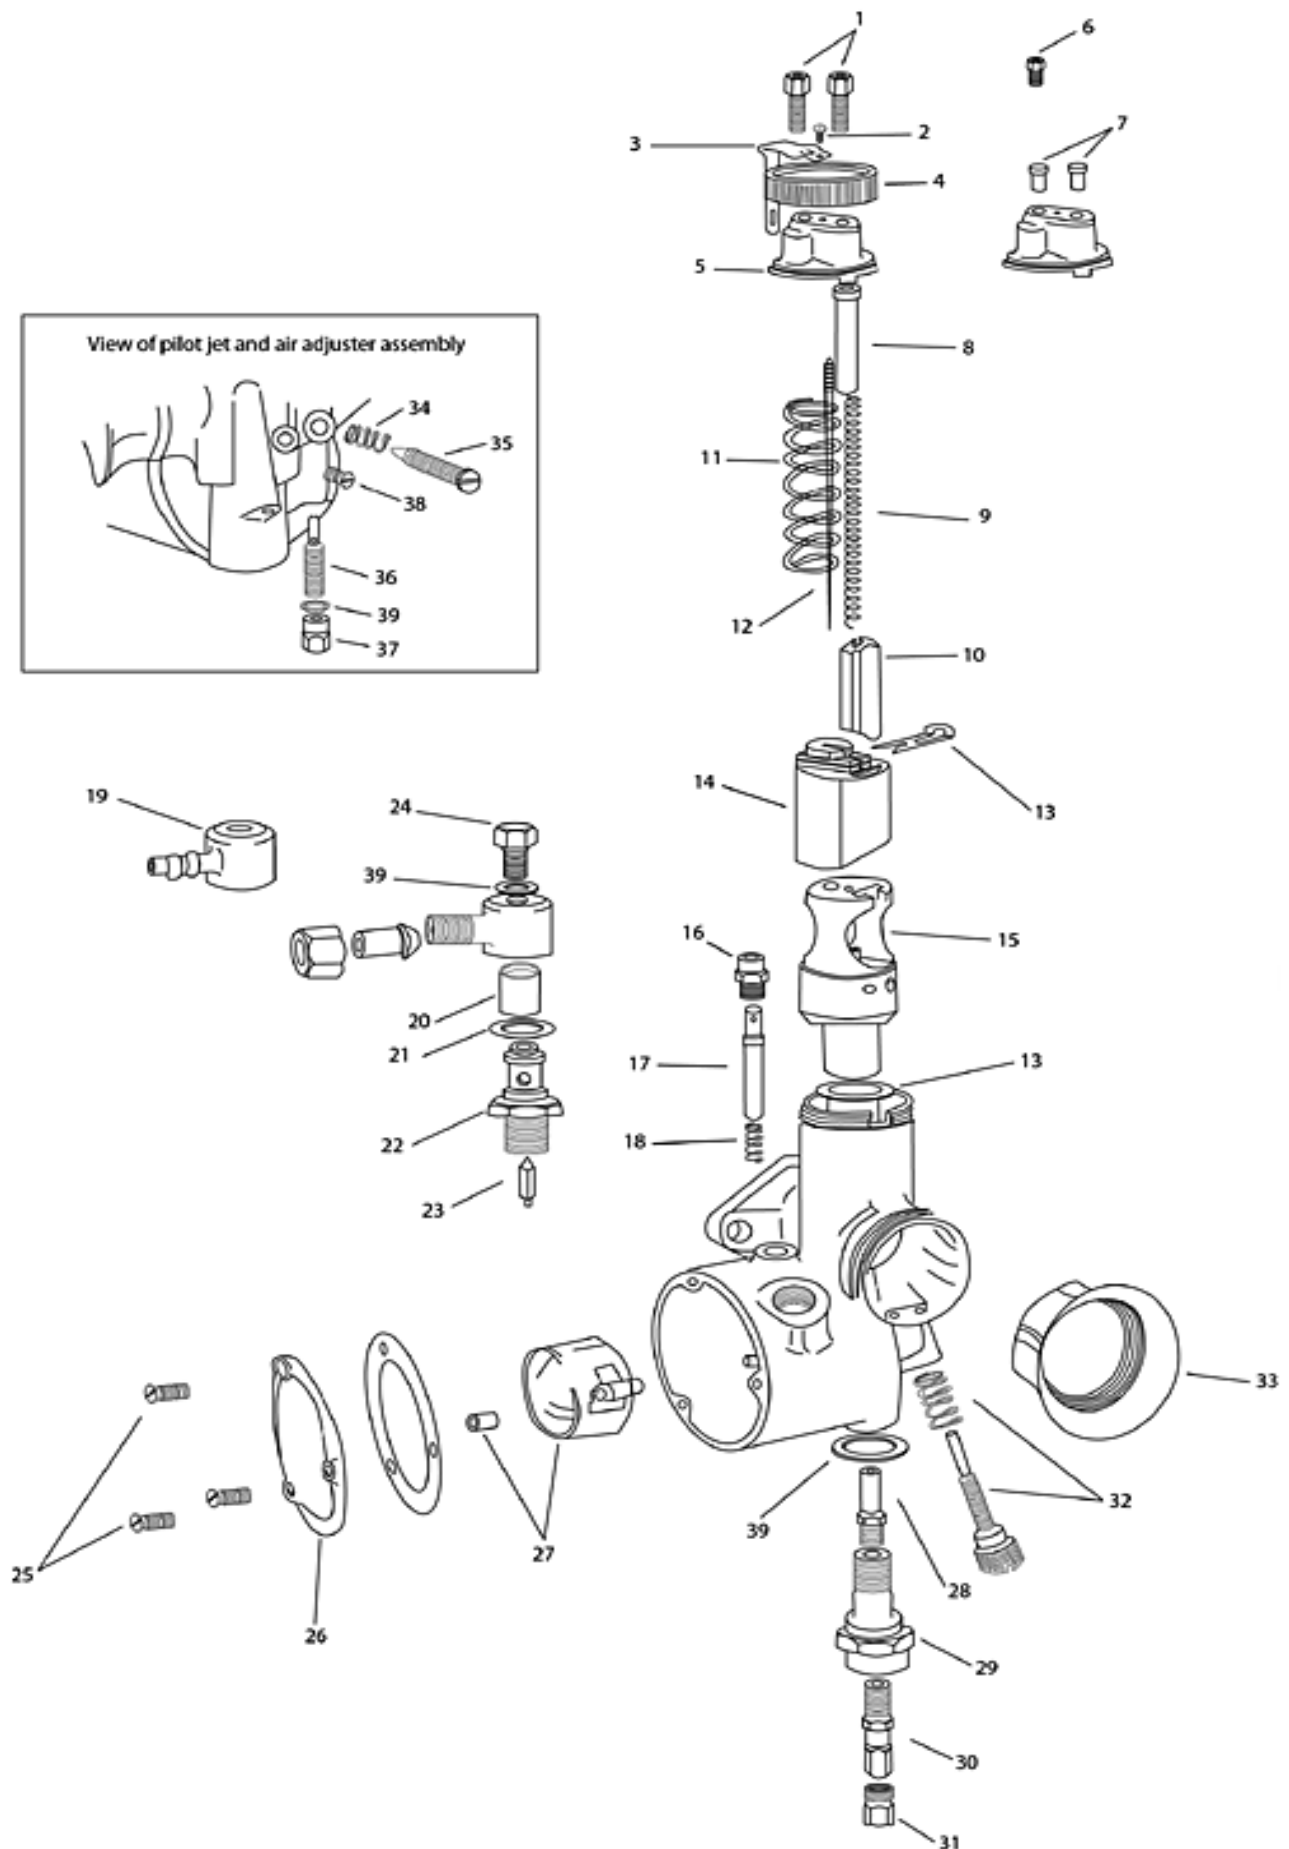


# Monobloc Carburettor

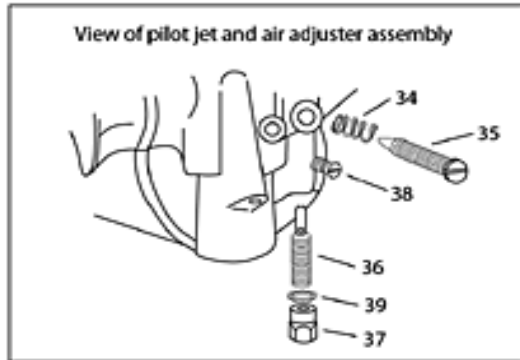

## 376 & 389 Series Monobloc Carburettor Spare Parts Details

Illustration Number	Illustration Component	376 Series	Part Number	389 Series	Part Number
1	Cable Adjuster	4/035	90001	4/035	90001
2	Cap Spring Screw	4/241	91508	4/241	91508
3	Cap Spring	4/235	91506	29/201	
4	Top Cap Ring	376/065	91509	389/065	91510
5	Mixing Chamber Top (standard)	376/064		389/064	
6	Plug Screw	4/137A	90092	4/137A	90092
7	Cable Ferrule	6/132A	90105	6/132A	90105
8	Air Valve Guide	6/047	91527	29/057	91528
9	Air Valve Spring	4/046	91526	4/046	91526
10	Air Valve	376/062	91524	389/062	91525
11	Throttle Slide Spring	376/061	91515	389/061	91516
12	Throttle Needle & Clip	376/063-4/230	91518	389/063-4/230	91519
13	Needle Clip	4/230	91517	4/230	91517
14	Throttle Valve No 3	376/060/3	91511	389/060/3	91513
14	Throttle Valve No 3.5	376/060/3.5	91512	389/060/3.5	91514
15	Jet Block	376/55/56/57		389/55/56/57	
16	Tickler Nut	343/011		343/011	
17	Tickler Pin	376/086		376/086	
18	Tickler Spring	376/087		376/087	
19	Single Metal Banjo	376/097	90220	376/097	90220
19	Twin Banjo 55 Deg	376/410	90338	376/410	90338
19	Twin Banjo 150 Deg	376/139	90331	376/139	90331
19	Twin Banjo 180 Deg	376/419	90707	367/419	90707
20	Brass Filter	376/093B	90215	376/093B	90215
21	Banjo Washer	14/175	90112	14/175	90112
22	Needle Seating	376/088		376/088	
23	Float Needle	622/197	90406	622/197	90406
24	Banjo Bolt	376/091	91531	376/091	91531
25	Float Chamber Screw Kit	376/079	91529	376/079	91529
26	Float Chamber Cover	376/077		376/077	
27	Float & Spindle Bush Kit	376/083-376/094	91530	376/083-376/094	91530
28	Needle Jet 4 Stroke 105	376/072-105	91520	376/072-105	91520
28	Needle Jet 4 Stroke 106	376/072-106	91521	376/072-106	91521
28	Needle Jet 4 Stroke 107	376/072-107	91522	376/072-107	91522
28	Needle Jet 4 Stroke 108	376/072-108	91523	376/072-108	91523
29	Main Jet Holder (standard)	376/073		376/073	
30	Main Jet, See Main Jet Chart	376/100		376/100	

<b>Illustration Number</b>	<b>Illustration Component</b>	<b>376 Series</b>	<b>Part Number</b>	<b>389 Series</b>	<b>Part Number</b>
31	Main Jet Cover Nut	376/075	91535	376/075	91535
32	Throttle Stop Screw Kit	376/068-376/069	91534	376/068-376/069	91534
33	Air Intake Tube	376/066		389/066	
34	Air Screw Spring	4/148	91533	4/148	91533
35	Air Screw	332/017	91532	332/017	91532
36	Pilot Jet No 20	376/076-20	91536	376/076-20	91536
36	Pilot Jet No 25	376/076-25	91537	376/076-25	91537
36	Pilot Jet No 30	376/076-30	91538	376/076-30	91538
37	Pilot Jet Cover Nut	376/095	91539	376/095	91539
38	Jet Block Location Peg	376/070		376/070	
39	Gasket Set, Complete, See Below		90175		90176
	Pilot Cover Jet Nut Washer	116/162		116/162	
	Banjo Bolt Sealing Washer	376/092		376/092	
	Washer For Jet Block	376/067		376/067	
	Float Chamber Gasket	376/077		376/077	
	Main Jet Holder Washer	376/074		376/074	